



SW701e/SW701i

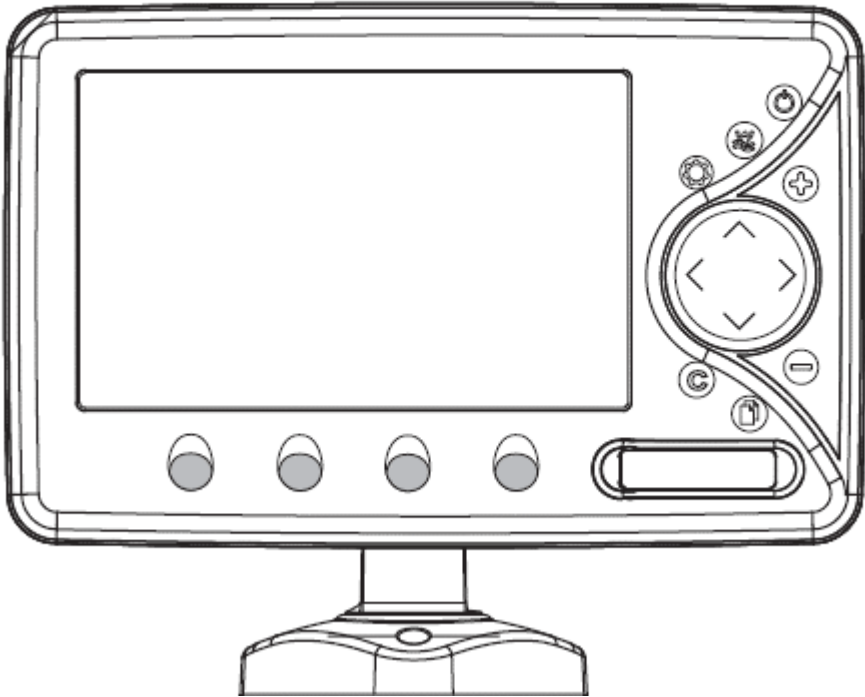


EXTERNAL WIRING

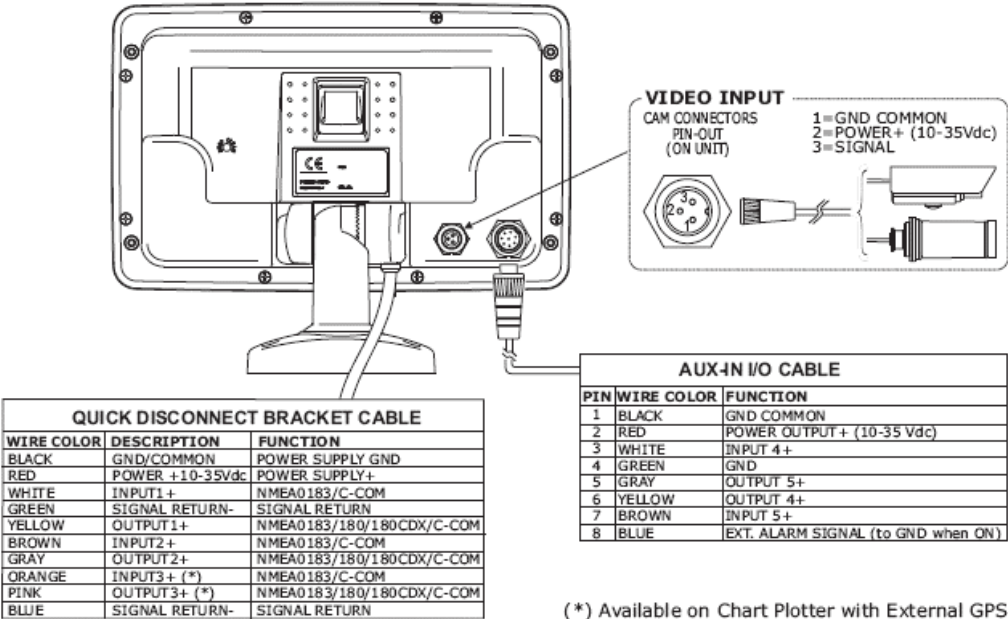


(*) Available on Chart Plotter with External GPS


External Wiring

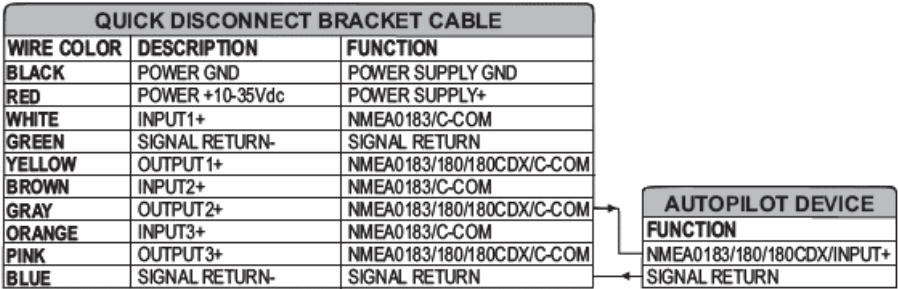

Autopilot Connection on Port 2

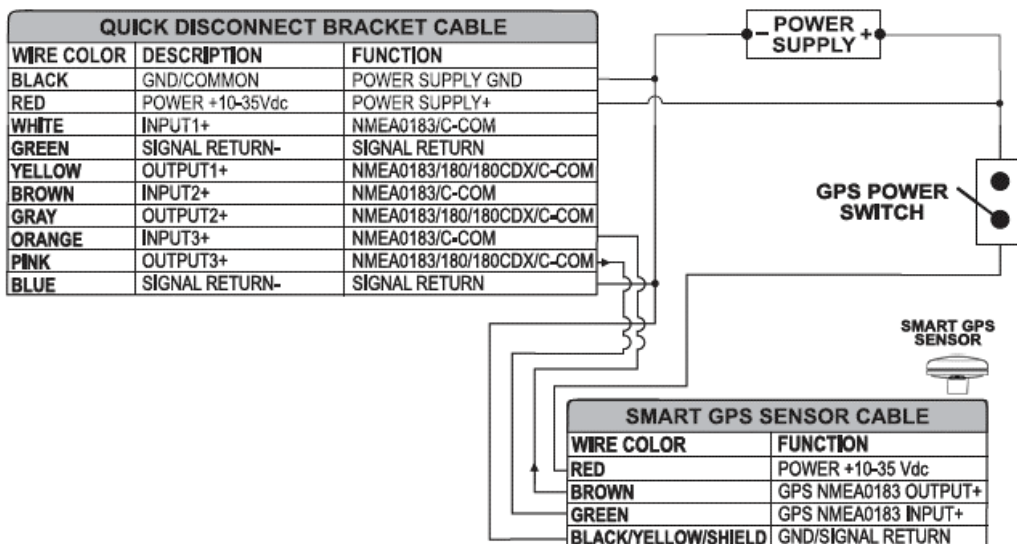

GPS Connection on Port 3 for SW701e

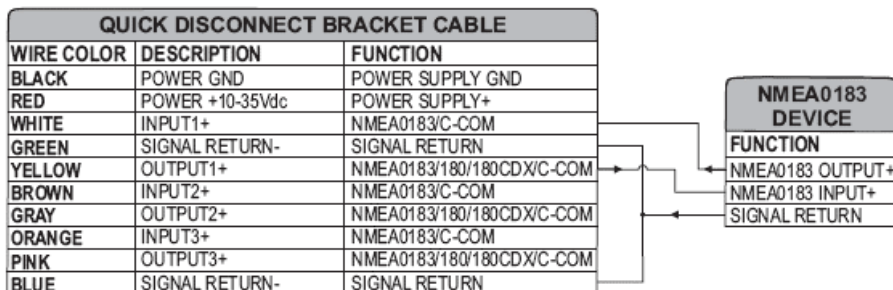


External NMEA Connection on Port 1

C-COM Connection


To connect the modem C-COM to the chart plotter with quick disconnect bracket follow the procedure:

1. Cut the C-COM cable about 5 cm from the "T" connector:

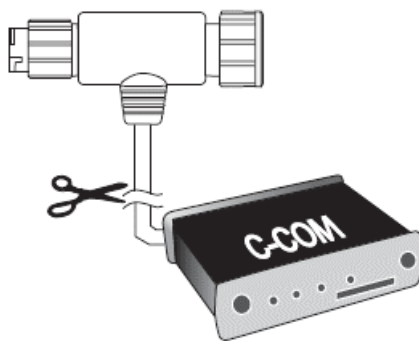

C-COM cable cutting procedure

2. Connect the wires to the quick disconnect bracket cable as follows:

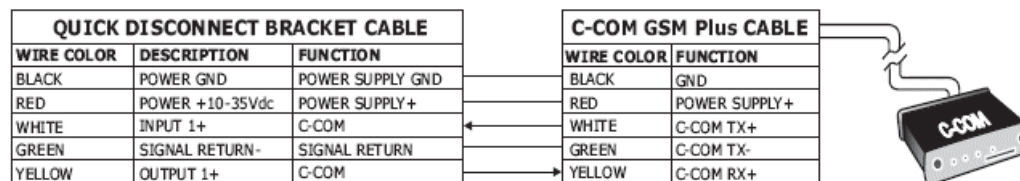

C-COM Connection on Port 1